

1,2,3, **VOTE**!

Voting With the ES&S AutoMARK

1 INSERT BALLOT

With the ballot still in the provided privacy sleeve, insert your ballot into the ES&S AutoMARK ballot acceptor. Next, select your preferred language by touching the proper box.



2 MAKE SELECTIONS

Touch each candidate and/or issue for which you intend to cast a vote. Your selections will be highlighted in yellow. You may change your selections at any time.

A. WRITE-IN CANDIDATES

For write-in candidates, touch the **"WRITE-IN"** option, and a keyboard will appear on the screen. Type in the name of a candidate and press **"OK."**



B. ON-SCREEN ACCESSIBILITY

The ES&S AutoMARK contains additional features to assist you during the voting process. At the bottom of the screen, you will have the opportunity to use the **ZOOM IN**, **ZOOM OUT**, or **HIGH CONTRAST** features to make the ballot easier to read.

Additional accessibility options can be found on the back of this card in the **Special Feature** section.




Left: **ZOOM IN/OUT** and **HIGH CONTRAST** buttons, found at the bottom of the screen, are available to make the ballot easier to read.

3 REVIEW AND MARK BALLOT

After you have completed the last page of your ballot, press the **"REVIEW"** button.

- To change a selection, touch the box next to a candidate or issue and reselect the proper choice. Then, hit the **"REVIEW"** button again to return to the summary screen.

Review your selections, and when complete, press **"MARK BALLOT"** to complete the voting procedure and to print the ballot. Then insert the marked ballot into the feeder slot of the ballot tabulator.

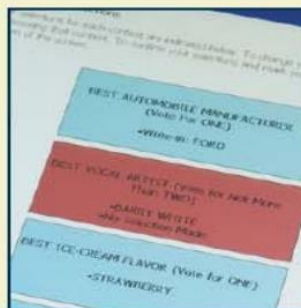

Galesburg Board of Elections

City Hall, 55 W. Tompkins St., PO Box 1387, Galesburg, IL 61402-1384